

# Magnetic Power Bank w/ Phone Stand Instruction Manual


## 7893

Please read the following carefully before using this device to ensure safe and proper usage.

### Package Content:

1x Power bank

1x USB-C to USB-C cable

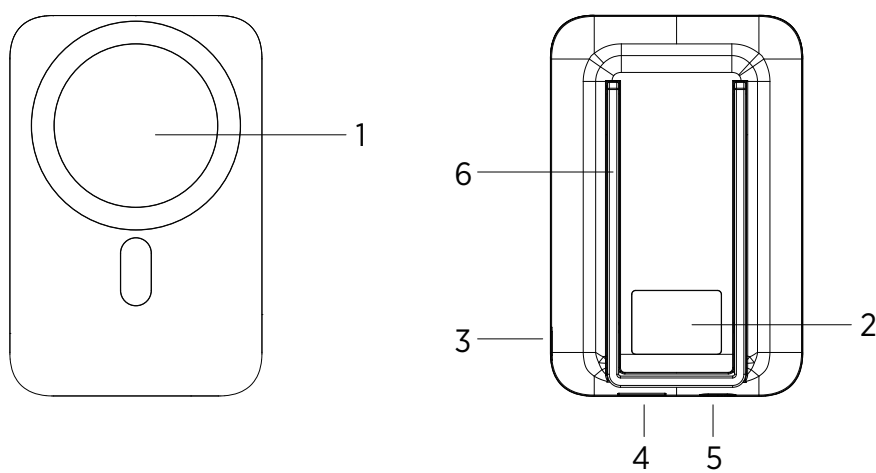

1. Wireless Charging Area

2. Battery Level Display Screen

3. USB-C Port(input&output)

4. USB-A Port(output)

5. Button

6. Stand

### Specifications:

Capacity: 10000mAh/3.85V

Input(USB-C): 5V=3A, 9V=2A

Output(USB-C): 5V=3A, 9V=2.22A, 12V=1.67A

Output(USB-A): 5V=4.5A, 9V=2A, 12V=1.5A

Wireless: 5W/7.5W/10W/15W Max.

USB-C+ Wireless: 5V=3A

LED display

### Charging your device using your power bank:

**IMPORTANT:** Before using your power bank for the first time, fully charge it (when powered on, the LED displays 100).

Connect the supplied USB-C cable (or the cable that came with your device) to the power bank's USB-A or USB-C port and to your device. Then begin charging.

During charging of your device, the power bank's percentage of remaining battery life will gradually decrease as your device receives power, when the power bank is low in power, the percentage will flash and go out automatically until all the power is used up.

The green charging icon in the LED display will light up once you enter fast charging mode.

### Checking your power bank battery's charging status

Momentarily press the power button on your power bank and the percentage of battery life remaining will appear on the LED display, 100 means that the power bank battery is fully charged, while 5 or under indicates that it's almost empty. Know before you go!

If you see the percentage is flashing, the battery status is less than 5%. Please recharge the power bank.

### Recharging your power bank:

To recharge your power bank, use the supplied USB cable to connect its USB-C port to a USB wall charging adapter. While recharging the power bank, the last digit of the percentage will blink. If there is one digit flashing, the charging is not completed. Once the power bank is fully charged, the 100 is displayed.

The green charging icon in LED will light up once you enter fast charging mode.

NOTE: For best results, do not connect the power bank to a computer's USB port. We recommend using a wall charging adapter that supports fast charging protocols such as QC or PD.

### Wireless charging:

Snap your smartphone that supports wireless charging on the magnetic charger surface, the wireless charging and green charging icon will light up once the unit enters wireless charging mode.

To stop the wireless charging function, simply remove the smartphone.

This wireless charger can charge smartphones with non-metal protective case or silicone covers that are no thicker than 6mm.

### Security advice:

Attention

- Incorrect usage can cause explosions / danger of chemical burns.
- Damaged batteries can cause chemical burns when they come in contact with human skin.
- Do not disassemble the item.
- Never throw the item or parts of it into fire.
- Never expose the item to high temperature changes Hot/Cold, humidity or liquids.
- Do not use if the item or parts of it are damaged.
- Store in a clean and dry space.
- To maintain battery good health, the item should be recharged every 6 months. Battery will lose capacity when stored without charging.
- If the product gets very hot, please disconnect the item and do not use it.
- Do not put any bare metal objects on the surface of wireless charger when it is operating.