 


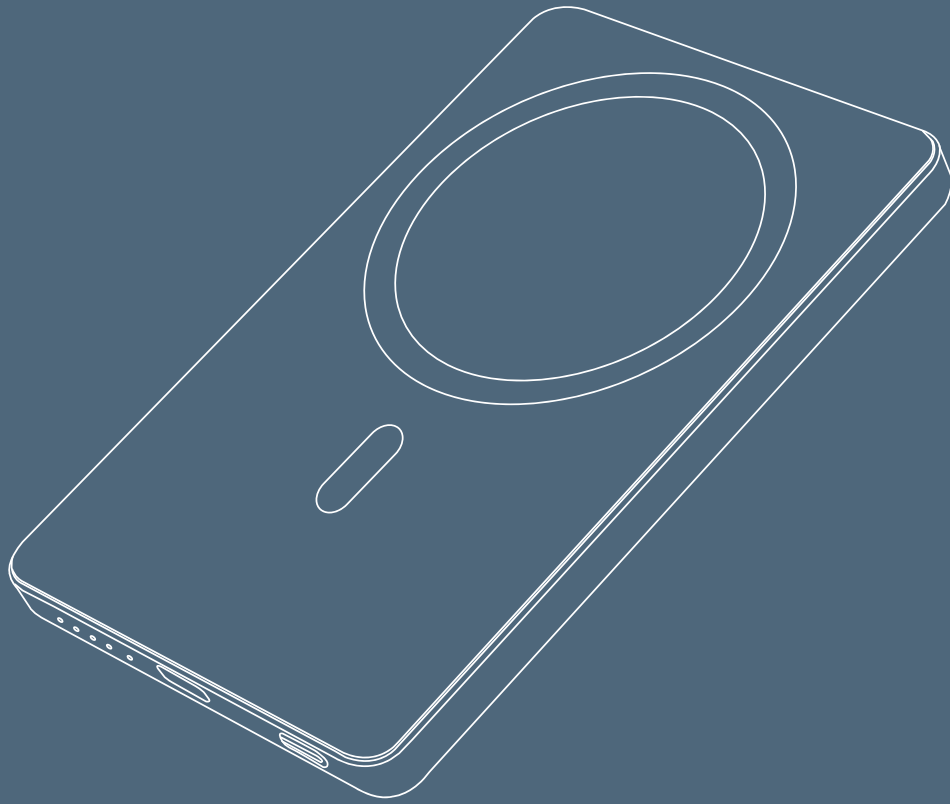


7897SL

Magnetic Power Bank

Instruction Manual

Whats Included:

 - Magnetic Power Bank
- USB-C Cable

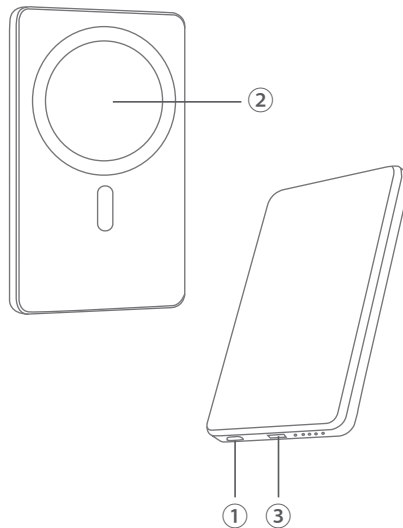

Functions:



1. Power Button
2. Wireless Charging Area
3. USB-C Input/Output

Specifications:


1. Product Material: Aluminum alloy+ABS
2. USB-C Input: 5V/3A, 9V/2A (18W Max)
3. USB-C Output: 5V/3A, 9V/2.22A, 12V/1.67A (20W Max)
4. Phone Wireless Output: 5W/7.5W/10W/15W
5. Earphone Wireless Output: 5W

Instructions:

1. To Charge devices:
 - a. Plug in your device to the USB-C port with cable, then your device will be charged.
 - b. Charge your devices wirelessly; Snap you Qi-enabled (mobile phone, earphone, etc) magnetically to the power bank to activate the wireless charging.

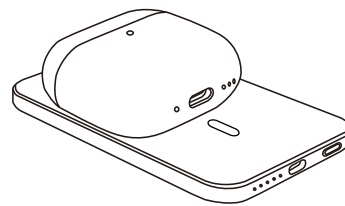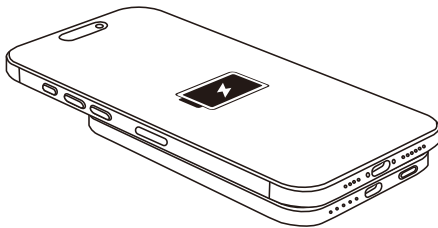

2. To recharge powerbank, connect the included charging cable to 5V or 9V USB power source via the USB-C port.

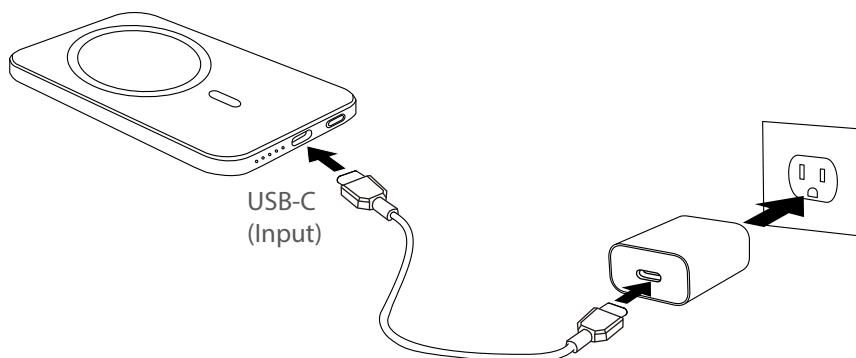

Warning:

If the power bank is to be left unused for a long period, please fully charge it every 6 months. When using this product, basic precautions should always be followed, including the following:

1. Before using your power bank for the first time, fully charge it.
2. Keep your power bank dry and away from moisture and corrosive materials.
3. Do not clean your power bank with harsh chemicals, soaps or detergents.
4. Do not store device in high-temperature environment, including heat caused by intense sunlight or other forms of heat
5. Do not put power bank close to the fire or water.
6. Do not disassemble this device or attempt to re-purpose or modify it in any manner.
7. To reduce the risk of injury, only charge the power bank on a hard non-flammable surface and do not leave unattended when charging.
8. Be cautious of excessive drops, bumps, abrasions, or other impacts to its device.
9. Use the power bank at a temperature between -10°C-50°C
9. Never dispose of batteries in the garbage. Always take used batteries to your local battery-recycling center